



# Buddy

## Wireless Speaker

### User Guide

#### 1. INTRODUCTION

Thank you for choosing the Pii Tech Buddy Wireless Speaker. This user guide provides essential information to help you set up, operate, and maintain your device, ensuring optimal performance and longevity. Please read this guide thoroughly before using your speaker.

#### 2. SETUP

##### 2.1 Know your speaker



## 2.2 Charging the device

Before initial use, charge your speaker. Connect the charging cable to the charging port on the speaker and plug the USB end into a standard USB power adapter (5V/1A recommended) or a computer's USB port. The indicator light will glow constant 'Red' while charging. Once speaker is fully charged, the light will start flashing.

## 2.3 Pairing your speaker with your Bluetooth audio device

To use your speaker in wireless mode, it must be paired with a compatible Bluetooth device such as a smartphone/ tablet / laptop/ TV/ etc.

1. **Switch On the speaker:** To Power On the speaker, slide the switch to the ON position. The speaker will switch on in the Bluetooth mode.
2. **Enable the connecting device's Bluetooth:** Ensure the Bluetooth of the connecting device (smartphone/ tablet / laptop/ TV/ etc.) is enabled.
3. **Connect your device to the speaker through Bluetooth:** On your device, search for Bluetooth devices and select the wireless speaker ('BDL-102') from the list of discovered Bluetooth devices. When the speaker is successfully connected, there will be a sound.

The speaker can now be used with your connected device to listen to music, and control volume or playlists.

## 2.4 Using your speaker in FM Radio Mode

In Bluetooth mode, LONG press the Mode button to change to Radio FM mode. To use the FM radio, connect the Charging wire into the Charging Port – you may leave the other end of the wire open or connect to USB power.

1. **Search FM stations:** Press Play/ Pause ►|| button once to search all radio stations. It will take a minute or two to search the stations. During radio search, you can hear all stations one by one for a few seconds. When all stations are stored, the speaker will stop at one radio station.
2. **Moving between FM stations:** Short Press + NEXT button once to go to the Next Station and Short Press – PREVIOUS button once to go BACK one station.
3. **Control the volume:** LONG press VOL + button to increase volume and LONG press VOL - button to decrease volume.
4. **Move out of FM Radio Mode:** Press M Mode button to change to Bluetooth or other mode.

IMPORTANT NOTE: To use the FM radio, connect the Charging wire into the Charging Port – you may leave the other end of the wire open or connect to USB power. The charging cable works like an Antenna to catch radio signals. You can move the cable as desired to get best radio reception. If the wire is not inserted into the charging port, the speaker will not catch any radio signals.

## 2.5 Using your speaker in USB/ TF Mode

This speaker can also be used to play audio directly from USB or TF Card.

1. **Insert USB or TF Card:** Insert a USB or a TF Card with audio files directly in the USB Port or the TF Card Port. The speaker will automatically enter the USB or TF Mode and start playing the audio files.
2. **Control the volume and playlist:** See section 3 below on 'Operating the Speaker' to learn how to Play/ Pause/ control the volume / control the playlist.

NOTE: The Speaker will go to USB or TF mode ONLY WHEN USB or TF card is inserted in the speaker. If there is no USB or TF card inserted, the speaker will not enter into these modes.

## 3. OPERATING THE SPEAKER

- **Switch On/ Off:** Slide the Power ON switch to the ON position to switch on the speaker.
- **Volume control:** When connected to a compatible device, Long Press the VOL+ Button to increase volume and Long Press the VOL- Button to decrease volume.
- **Next / Previous Song:** When connected to a compatible device, Short Press the NEXT + Button to move to the next song and Short Press the PREVIOUS - Button to move to the previous song.
- **Play/ Pause:** Press the ► Play/ Pause button to Pause/ Play.
- **Torch:** This speaker has several light modes. In Bluetooth or Radio (FM) mode, Long press Mode/ Torch (1) button to change to Torch mode. The Torch will switch On in High Torch Mode. Long Press (1) → Low Torch mode; Long press (1) again → Fast Flash Torch mode; Long press (1) again → Slow Flash Torch mode; Long press (1) again to turn off the torch.

## 4. MAINTENANCE

### 4.1 Cleaning your speaker

Regularly clean your speaker to ensure proper function and hygiene.

- Wipe the body with a soft cloth.
- For stubborn dirt, slightly dampen the cloth with water. Do NOT use water/ liquid or any harsh chemicals or abrasive materials to clean the speaker.
- Ensure the charging contacts are clean and dry before charging.

### 4.2 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- Do not leave the speaker fully discharged for extended periods.
- Use only the provided charging cable or a certified replacement to charge the speaker.

## 5. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common solutions:

Problem	Solution
Speaker is not turning on	<ul style="list-style-type: none"><li>• Ensure the speaker is fully charged.</li><li>• Press and hold the Power On/Off button for at least 10 seconds.</li></ul>
Speaker is not charging	<ul style="list-style-type: none"><li>• Please make sure that the charging cable is correctly connected.</li><li>• When the power of the speaker is very low, there will be a period of battery pre-charging time and the speaker will take some time before charging fully.</li></ul>
Unable to pair the speaker with devices	<ul style="list-style-type: none"><li>• Check if Bluetooth is enabled on your device and the speaker.</li><li>• Please make sure that the speaker is powered and is not connected by any other smart phone/ device(s).</li><li>• Move the speaker close to the connecting device and search again. If it still does not connect, turn off the Bluetooth of the connecting device and turn it on again after 20 seconds; try re-connecting.</li><li>• Restart both the device and speaker, and re-try connecting.</li></ul>
FM Radio stations are not connecting	<ul style="list-style-type: none"><li>• Connect the Charging wire into the Charging Port – you may leave the other end of the wire open or connect to USB power. The charging cable works like an Antenna to catch radio signals.</li><li>• Move the Charging cable as desired to get best radio reception. If the wire is not inserted into, the speaker will not catch any radio signals.</li><li>• If the speaker is still not able to catch all stations, move the Speaker outside or to a different location with better radio signal strength.</li></ul>