

Glow

Wireless Speaker


User Guide

1. INTRODUCTION

Thank you for choosing the Pii Tech Glow Wireless Speaker. This user guide provides essential information to help you set up, operate, and maintain your device, ensuring optimal performance and longevity. Please read this guide thoroughly before using your speaker.

2. SETUP

2.1 Know your speaker

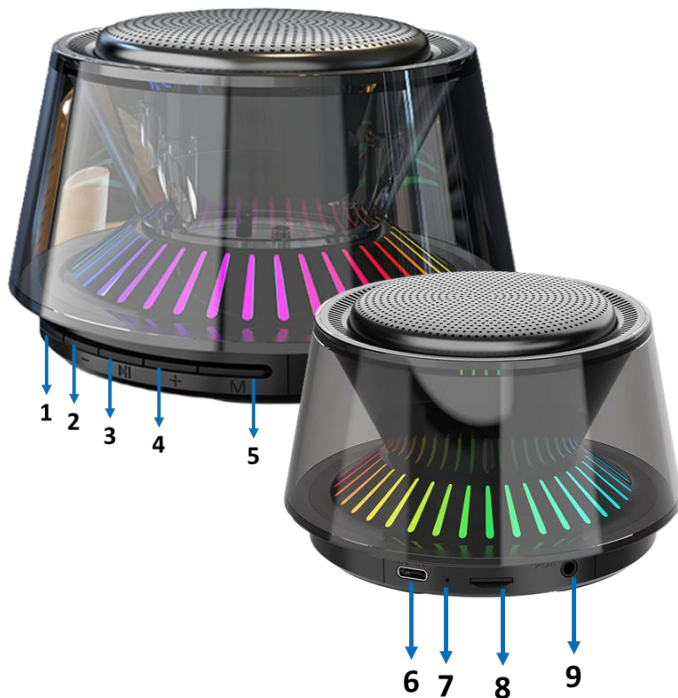

1. * : POWER ON/OFF and LED LIGHT
2. - : VOL - / PREVIOUS
3. ► : PLAY / PAUSE
4. + : VOL + / NEXT
5. M: MODE
6. CHARGING PORT
7. INDICATOR LIGHT
8. TF CARD PORT
9. AUX INPUT

2.2 Charging the device

Before initial use, charge your speaker. Connect the charging cable to the charging port on the speaker and plug the USB end into a standard USB adapter (5V/1A recommended) or a computer's USB port. The indicator light will glow 'Red' while charging and will turn off once fully charged.

2.3 Pairing your speaker with your Bluetooth audio device

To use your speaker in wireless mode, it must be paired with a compatible Bluetooth device such as a smartphone/ tablet / laptop/ TV/ etc.

1. **Switch On the speaker:** Long Press the Power On / Off button to switch On the speaker. The speaker will switch on in the Bluetooth mode with the indicator light flashing 'Blue'.
2. **Enable the connecting device's Bluetooth:** Ensure the Bluetooth of the connecting device (smartphone/ tablet / laptop/ TV/ etc.) is enabled.
3. **Connect your device to the speaker through Bluetooth:** On your device, search for Bluetooth devices and select the wireless speaker ('2407') from the list of discovered Bluetooth devices. When the speaker is successfully connected, there will be a sound. The indicator light will stop flashing and will stay 'Blue'.


The speaker can now be used with your connected device to listen to music, and control volume or playlists.

2.4 Using your speaker in TWS mode (Pairing 2 Glow speakers together)

To activate TWS, switch on 2 Glow speakers, both in Bluetooth Mode; LONG press Mode button on both the speakers. Once the two speakers are connected together successfully, you will hear a sound. Both speakers will auto-link when turning on the speaker next time. (Please note that this function needs 2 pieces of Glow speakers).

2.5 Using your speaker in FM Radio Mode

In Bluetooth mode, Press the Mode button to change to FM mode. To use the FM radio, connect the Charging wire into the Charging Port – you may leave the other end of the wire open or connect to USB power.

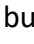1. **Search FM stations:** Press Play/ Pause  button once to search all radio stations. It will take a minute or two to search the stations. During radio search, you can hear all stations one by one for a few seconds. When all stations have been stored, the speaker will stop at one radio station.
2. **Moving between FM stations:** Press NEXT + button once to go to the Next Station and Press PREVIOUS - button once to go BACK one station.
3. **Control the volume:** LONG press VOL + button to increase volume and LONG press VOL - button to decrease volume.
4. **Move out of FM Radio Mode:** Press Mode button to change to Bluetooth or other mode.

IMPORTANT NOTE: To use the FM radio, connect the Charging wire into the Charging Port – you may leave the other end of the wire open or connect to USB power. The charging cable works like an Antenna to catch radio signals. You can move the cable as desired to get best radio reception. If the wire is not inserted into charging port, the speaker will not catch any radio signals.

2.6 Using your speaker in TF Mode

This speaker can also be used to play audio directly from a TF Card.

1. **Insert a TF Card:** Insert a TF Card with audio files directly in the TF Card Port. The speaker will automatically enter the TF Mode and start playing the audio files.
2. **Control the volume and playlist:** See section 3 below on 'Operating the Speaker' to learn how to Play/ Pause/ control the volume / control the playlist.

NOTE: The Speaker will go to TF mode ONLY WHEN a TF card is inserted in the speaker. If there is no TF card inserted, the speaker will not show this mode.

2.7 Using your speaker in AUX input mode

The speaker can also be used in a wired mode, using the AUX input to connect to another device. To activate this mode, insert an audio cable (not included) with a 3.5mm jack into the AUX Input port of the speaker. Connect the other end of this audio cable to the 'Audio Out' of the connecting device. The speaker is now connected to the external device through the audio cable.

3. OPERATING THE SPEAKER

- **Switch On/ Off:** Long Press the Power On/ Off button to switch On / Off the speaker.
- **Volume control:** When connected to a compatible device, Long Press the VOL+ Button to increase volume and Long Press the VOL- Button to decrease volume.
- **Next / Previous Song:** When connected to a compatible device, Short Press the + NEXT Button to move to the next song and Short Press the – PREVIOUS Button to move to the previous song.
- **Play/ Pause:** Press Play/ Pause ►|| button to Pause/ Play.
- **LED Lights:** This speaker has several LED light modes. Short Press Power On/ LED light button to change LED modes (Short press again and again to change to LED light modes). Double Press Power On/ LED light button to turn off/ on the LED lights.
- **Taking a call:** When connected to a smartphone and there is an incoming call, Press the Play/ Pause ►|| button to answer the call and again Press the Play/ Pause ►|| to finish the call; OR Long Press the Play/ Pause ►|| button to reject the call. You can double Press the Play/ Pause ►|| button to call back the last number.

4. MAINTENANCE

4.1 Cleaning your speaker

Regularly clean your speaker to ensure proper function and hygiene.

- Wipe the body with a soft cloth. For stubborn dirt, slightly dampen the cloth with water. Do NOT use water/ liquid or any harsh chemicals or abrasive materials to clean the speaker.
- Ensure the charging contacts are clean and dry before charging.

4.2 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- Do not continue to charge a fully charged speaker. Overcharging will shorten battery life.
- Do not leave the speaker fully discharged for extended periods.
- Use only the provided charging cable or a certified replacement to charge the speaker.

5. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common solutions:

Problem	Solution
Speaker is not turning on	<ul style="list-style-type: none">• Ensure the speaker is fully charged.• Press and hold the Power On/Off button for at least 10 seconds.
Speaker is not charging	<ul style="list-style-type: none">• Please make sure that the charging cable is correctly connected.• When the power of the speaker is very low, there will be a period of battery pre-charging time and the speaker will take some time before charging fully.
Unable to pair the speaker with devices	<ul style="list-style-type: none">• Check if Bluetooth is enabled on your device and the speaker.• Please make sure that the speaker is powered and is not connected by any other smart phone/ device(s).• Move the speaker close to the connecting device and search again. If it still does not connect, turn off the Bluetooth of the connecting device and turn it on again after 20 seconds; try re-connecting.• Restart both the device and speaker, and re-try connecting.
FM Radio stations are not connecting	<ul style="list-style-type: none">• Connect the Charging wire into the Charging Port – you may leave the other end of the wire open or connect to USB power. The charging cable works like an Antenna to catch radio signals.• Move the Charging cable as desired to get best radio reception. If the wire is not inserted into charging port, the speaker will not catch any radio signals.• If the speaker is still not able to catch all stations, move the Speaker outside or to a different location with better radio signal strength.