



# Mini

## Wireless Speaker

### User Guide

#### 1. INTRODUCTION

Thank you for choosing the Pii Tech Mini Wireless Speaker. This user guide provides essential information to help you set up, operate, and maintain your device, ensuring optimal performance and longevity. Please read this guide thoroughly before using your speaker.

#### 2. SETUP

##### 2.1 Know your speaker



## 2.2 Charging the device

Before initial use, charge your speaker. Connect the charging cable to the charging port on the speaker and plug the USB end into a standard USB power adapter (5V/1A recommended) or a computer's USB port.

## 2.3 Pairing your speaker with your Bluetooth audio device

To use your speaker in wireless mode, it must be paired with a compatible Bluetooth device such as a smartphone/ tablet / laptop/ TV/ etc.

1. **Switch On the speaker:** Long Press (3 seconds) the Power On / Off button to switch On the speaker. The LED lights will flash. The speaker will switch on in the Bluetooth mode.
2. **Enable the connecting device's Bluetooth:** Ensure the Bluetooth of the connecting device (smartphone/ tablet / laptop/ TV/ etc.) is enabled.
3. **Connect your device to the speaker through Bluetooth:** On your device, search for Bluetooth devices and select the wireless speaker ('G200') from the list of discovered Bluetooth devices. When the speaker is successfully connected, there will be a sound.

The speaker can now be used with your connected device to listen to music, and control volume or playlists.

## 2.4 Using your speaker in TWS mode (Pairing 2 Pii Tech Mini speakers together)

To activate TWS, Power On 2 Pii Tech Mini speakers, both in Bluetooth Mode; Double press the Power On button on both the speakers, to enter TWS mode. Once the two speakers are connected together successfully, you will hear a sound. Both speakers will auto-link when turning on the speaker next time. (Please note that this function needs 2 units of Pii Tech Mini speakers).

## 3. OPERATING THE SPEAKER

- **Switch On/ Off:** Long Press (3 sec) the Power On/ Off button to switch On / Off the speaker.
- **Volume control:** Use the volume control of the connected audio device (e.g. smartphone) to increase / decrease the volume of the speaker.
- **Next / Previous Song:** Use the connected audio device (e.g. smartphone) to control the playlist or move between songs.
- **Play/ Pause:** Short Press Power On button to Pause/ Play.
- **LED lights:** Triple Press the Power On button to turn Off the LED lights. Triple Press the Power On button again to turn On the LED lights.

## 4. MAINTENANCE

### 4.1 Cleaning your speaker

Regularly clean your speaker to ensure proper function and hygiene.

- Wipe the body with a soft cloth.
- For stubborn dirt, slightly dampen the cloth with water. Do NOT use water/ liquid or any harsh chemicals or abrasive materials to clean the speaker.
- Ensure the charging contacts are clean and dry before charging.

### 4.2 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- Do not leave the speaker fully discharged for extended periods.
- Use only the provided charging cable or a certified replacement to charge the speaker.

## 5. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common solutions:

Problem	Solution
Speaker is not turning on	<ul style="list-style-type: none"><li>• Ensure the speaker is fully charged.</li><li>• Press and hold the Power On/Off button for at least 10 seconds.</li></ul>
Speaker is not charging	<ul style="list-style-type: none"><li>• Please make sure that the charging cable is correctly connected.</li><li>• When the power of the speaker is very low, there will be a period of battery pre-charging time and the speaker will take some time before charging fully.</li></ul>
Unable to pair the speaker with devices	<ul style="list-style-type: none"><li>• Check if Bluetooth is enabled on your device and the speaker.</li><li>• Please make sure that the speaker is powered and is not connected by any other smart phone/ device(s).</li><li>• Move the speaker close to the connecting device and search again. If it still does not connect, turn off the Bluetooth of the connecting device and turn it on again after 20 seconds; try re-connecting.</li><li>• Restart both the device and speaker, and re-try connecting.</li></ul>