

TurboSound

Wireless Earbuds

User Guide

1. INTRODUCTION

Thank you for choosing the Pii Tech TurboSound Wireless Earbuds. This user guide provides essential information to help you set up, operate, and maintain your device, ensuring optimal performance and longevity. Please read this guide thoroughly before using your earbuds.

2. SETUP

2.1 Know your earbuds



1. Earbud Touch Panel
2. Charging Case
3. 1.47" Full Colour High-Definition Touchscreen
4. Screen Wake-up/ Power On button
5. Charging Port

2.2 Charging the device

Before initial use, charge your earbuds and the Charging Case. To charge the Earbuds, place them in their slot in the Charging Case. The LCD Touchscreen will display the charge % for each Earbud and the Case.

To charge the Charging Case, connect the charging cable to the Charging Port on the Charging Case and plug the USB end into a standard USB power adapter (5V/1A recommended) or a computer's USB port. The LCD Touchscreen will display the charge % of the Charging Case.

Note - If the power of the earbuds is fully discharged / very low, or it has been kept unused for many days, there will be a period of battery pre-charging time and the earbuds will take some time before showing charging. This is normal battery charging process.

2.3 Pairing your Earbuds with your Bluetooth audio device

To use your earbuds in wireless mode, they must be paired with a compatible Bluetooth device such as a smartphone/ tablet / laptop/ TV/ etc.

1. **Switch On the Earbuds:** Remove the Earbuds from the Charging Case and the Earbuds will automatically Switch On in pairing mode.
2. **Pair the Earbuds:** The two Earbuds will automatically pair and will give a prompt in the ear when the pairing is successful.
3. **Enable the connecting device's Bluetooth:** Turn On the Bluetooth function of the connecting device (smartphone/ tablet / laptop/ TV/ etc.).
4. **Connect your device to the Earbuds through Bluetooth:** On your device, search for Bluetooth devices and select the wireless Earbuds (YW07) from the list of discovered Bluetooth devices. When the Earbuds are successfully connected, the Earbuds will give a prompt confirming the connection.

The Charging Case and earbuds can now be used with your connected device to listen to music, take calls, control volume/ playlists, and multiple other functions.

3. OPERATING THE EARBUDS

One can control the functions of the earbuds directly from the Earbud Touch Panel on the earbuds, as below, OR through the Touchscreen Charging Case that allows multiple other functions (see section 4).

 
 
 
- **Switch On/ Off:** Remove the Earbuds from the Charging Case and Earbuds will automatically Switch On. You will hear 'Power On' prompt in the earbud. To Switch off the Earbuds, put them back in Charging Case.
- **Play/ Pause:** When connected to an audible device and listening to music, touch Earbud Touch Panel of either earbud once to Pause the music; touch again to Play.
- **Taking a call:** When connected to a smartphone and there is an incoming call, touch the Earbud Touch Panel once to answer the call; touch again to end an ongoing call. Long touch (2 seconds) the Earbud Touch panel once to reject an incoming call.
- **Next / Previous Song:** When connected to a compatible device, double tap the Right Earbud Touch Panel to move to the Next song; double tap the Left Earbud Touch Panel to move to Previous song.
- **Volume control:** When connected to a compatible device, triple touch the Left Earbud Touch Panel to increase volume and triple touch the Right Earbud Touch Panel to decrease volume.
- **Activate Voice Assistant:** When connected to a compatible device, Long Press (for 1-2 seconds) the Earbud Touch Panel on either earbud to activate the Voice Assistant on your smartphone.
- **ANC Mode:** When connected to a compatible device, Press Four times on any Earbud Touch Panel to activate the Active Noise Cancellation Mode. Touch Four times again to de-activate the mode.

 
 
4. OPERATING THROUGH THE TOUCHSCREEN CHARGING CASE

The Touchscreen Charging Case has a 1.47" Full colour high-definition touchscreen that allows several functions.

- **Wake-up/ Activate the Touchscreen:** Activate the touchscreen by quickly double clicking on it (if 'Touch to wake' has been enabled by you). OR Short Press the Screen Wake-up button at the bottom of the case to activate the screen. To make the screen enter 'Stand-by' mode, Short Press the Screen Wake-up button 3 times and on the third time, keep holding for 3 seconds. This will activate the 'Stand-by' mode for the screen.
- **Re-start the Charging Case:** Long Press (for 10 seconds) the Screen Wake-up button at the bottom of the case to re-start the Charging Case.
- **Access Multiple functions:** Swipe-left or Swipe-right the Screen to access different functions and tap on the screen to go into the desired function/ follow instructions on the screen.

A glimpse of a few of the several functions available on the Touchscreen Charging Case are shown below:

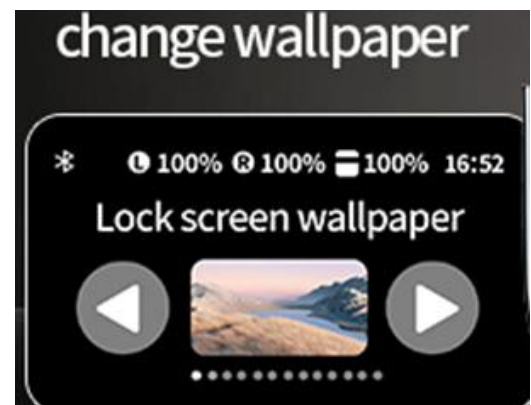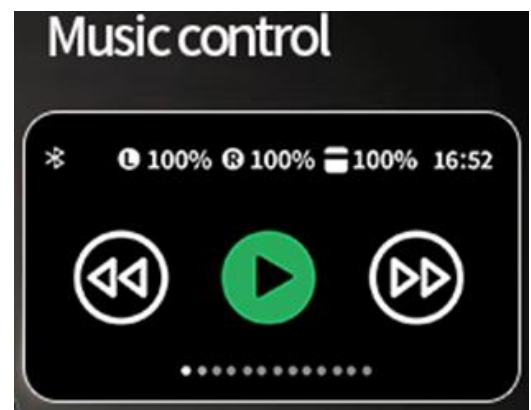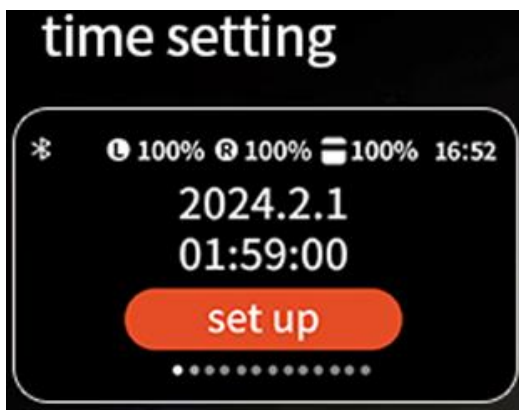

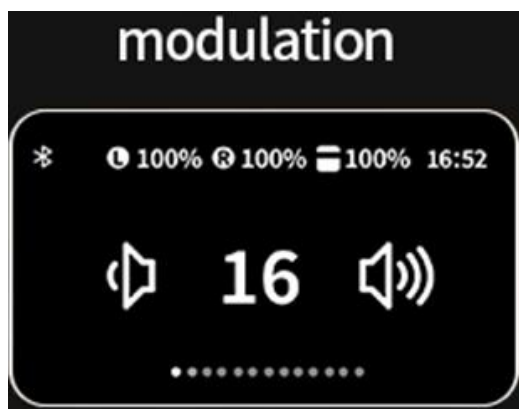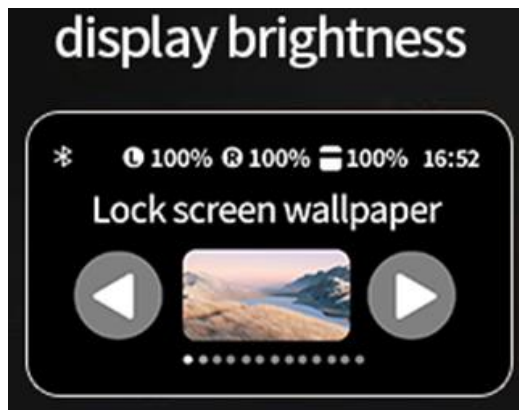

..and many more functions. Please see the charging case to access all the functions.

5. MAINTENANCE

4.1 Cleaning your Earbuds and Charging Case

Regularly clean your Earbuds and Charging Case to ensure proper function and hygiene.

- Wipe the body with a soft cloth.
- For stubborn dirt, slightly dampen the cloth with water. Do NOT use water/ liquid or any harsh chemicals or abrasive materials to clean it.
- Ensure the charging contacts are clean and dry before charging.
- Be careful to not scratch / damage the LCD touchscreen, as this may cause problems in accessing some functions of the touchscreen/ charging case.

4.2 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- Do not leave the Earbuds fully discharged for extended periods.
- Use only the provided charging cable or a certified replacement to charge the Charging Case.
- Use the 1A output to charge the Charging Case; do not use fast chargers with higher Amperes as this may damage the Charging Case and battery.

5. TROUBLESHOOTING

If you encounter issues with your Earbuds, refer to the following common solutions:

Problem	Solution
Earbuds not turning on	<ul style="list-style-type: none">• Ensure the Earbuds are fully charged.• Press and hold the Power On/Off Panel for at least 10 seconds.
Earbuds/ Charging Case not charging	<ul style="list-style-type: none">• Please make sure that the charging cable is correctly connected.• Please make sure that the Earbuds are properly placed in the Charging Case with charging points aligned to the case for proper contact.• When the power of the Earbuds/ Charging Case is very low, there will be a period of battery pre-charging time and the Earbuds will take some time before charging fully.
Unable to pair the Earbuds with devices	<ul style="list-style-type: none">• Check if Bluetooth is enabled on your device.• Please make sure that the Earbuds are powered and is not connected by any other smart phone/ device(s).• Move the Earbuds close to the connecting device and search again. If it still does not connect, turn off the Bluetooth of the connecting device and turn it on again after 20 seconds; try re-connecting.• Restart both the device and Earbuds, and re-try connecting.